

FYREYE MKII ADDRESSABLE SOUNDER CONTROL MODULE WITH ISOLATOR INSTALLATION GUIDE

General

The Fyreye MkII Addressable Sounder Control Module is supplied with a backbox for surface mounting.

NOTE: The Sounder Control Module is designed for indoor use only.

This module is NOT LOOP POWERED, an adequate 24Vdc input is required with the necessary battery back up. Note the input voltage should provide adequate current to operate the ZASC-MI in addition to operating the connected alarm load.

Model No: ZASC-MI Fyreye MkII Addressable Sounder Control Module With Isolator

Surface Mounting


- 1. Mount the backbox as required and install all cables for termination.
- 2. Set the address of the unit as shown on page 3.
- 3. Terminate all cables.
- 4. Gently push the completed assembly towards the back box until the mounting holes are aligned and secure with the two mounting screws provided. DO NOT OVERTIGHTEN.

Isolator Module


The Sounder Control Module is fitted with a bi-directional short-circuit isolator and will be unaffected by loop short-circuits on either loop input or output.


Wiring Details

All wiring terminals will accept solid or stranded cables up to 2.5mm²

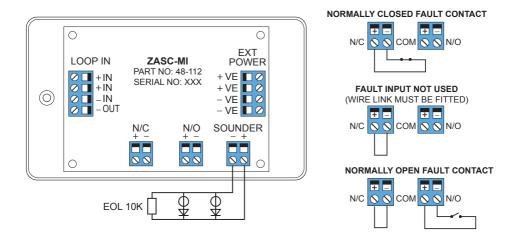

Typical Connections

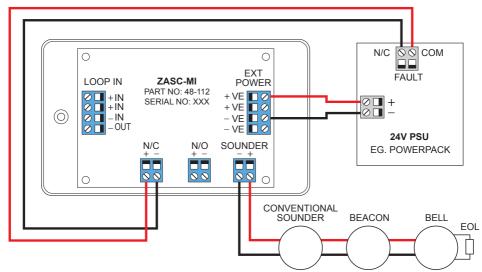

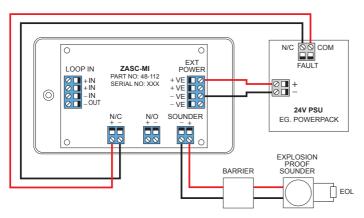

Technical Specification

Model	ZASC-MI
Part Number	48-112
Operating Voltage (Loop)	17 - 28V DC
Quiescent Current (Loop)	0.6 mA
Fault Current (Loop)	0.6 mA
Sounder On Current (Loop)	0.8 mA
Operating Voltage (Ext. Power)	9-32V DC
Quiescent Current (Ext. @ 24V)	2 mA
Sounder On Current (Ext. @ 9V)	2.5mA Plus Sounder Load
Sounder On Current (Ext. @ 32V)	9.5mA Plus Sounder Load
Sounder Output Rating	500 mA
Isolating Current	7.3mA
Sounder End of Line	10K (tolerance 7.5K to 15K)
Operating Temperature	-10°C to +55°C
Max Humidity	95% RH Non Condensing
IP Rating	IP21C
Size	150 x 90 x 45 mm
Weight	220g

For information on the short circuit isolator operation see document GLT-224-6-9 available from your distributor.

Address Setting

The address of the Sounder Control Module is set using the eight segments of the DIL switch. Each segment of the switch must be set to "0"(ON) or "1"(OFF), using a small screwdriver or similar tool. A complete list of address settings is shown overleaf. The maximum address is 250.


ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
0									64	ON	ON	ON	ON	ON	ON	OFF	ON
1	OFF	ON	ON	ON	ON	ON	ON	ON	65	OFF	ON	ON	ON	ON	ON	OFF	ON
2	ON OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	ON ON	ON ON	66 67	ON OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	ON ON
4	ON	ON	OFF	ON	ON	ON	ON	ON	68	ON	ON	OFF	ON	ON	ON	OFF	ON
5	OFF	ON	OFF	ON	ON	ON	ON	ON	69	OFF	ON	OFF	ON	ON	ON	OFF	ON
6	ON	OFF	OFF	ON	ON	ON	ON	ON	70	ON	OFF	OFF	ON	ON	ON	OFF	ON
7 8	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	71	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	ON ON
9	OFF	ON	ON	OFF	ON	ON	ON	ON	73	OFF	ON	ON	OFF	ON	ON	OFF	ON
10	ON	OFF	ON	OFF	ON	ON	ON	ON	74	ON	OFF	ON	OFF	ON	ON	OFF	ON
11 12	OFF ON	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	75	OFF ON	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON
13	OFF	ON	OFF	OFF	ON	ON	ON	ON	70	OFF	ON	OFF	OFF	ON	ON	OFF	ON
14	ON	OFF	OFF	OFF	ON	ON	ON	ON	78	ON	OFF	OFF	OFF	ON	ON	OFF	ON
15	OFF	OFF	OFF	OFF	ON	ON	ON	ON	79	OFF	OFF	OFF	OFF	ON	ON	OFF	ON
16 17	ON OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON	ON ON	ON ON	80 81	ON OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON	OFF OFF	ON ON
18	OPP	OFF	ON	ON	OFF	ON	ON	ON	82	ON	OFF	ON	ON	OFF	ON	OFF	ON
19	OFF	OFF	ON	ON	OFF	ON	ON	ON	83	OFF	OFF	ON	ON	OFF	ON	OFF	ON
20	ON	ON	OFF	ON	OFF	ON	ON	ON	84	ON	ON	OFF	ON	OFF	ON	OFF	ON
21 22	OFF ON	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	85 86	OFF ON	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON
23	OFF	OFF	OFF	ON	OFF	ON	ON	ON	87	OFF	OFF	OFF	ON	OFF	ON	OFF	ON
24	ON	ON	ON	OFF	OFF	ON	ON	ON	88	ON	ON	ON	OFF	OFF	ON	OFF	ON
25	OFF	ON	ON	OFF OFF	OFF	ON	ON	ON	89	OFF	ON OFF	ON	OFF	OFF	ON	OFF OFF	ON
26 27	ON OFF	OFF OFF	ON ON	OFF	OFF OFF	ON ON	ON ON	ON ON	90 91	ON OFF	OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF	ON ON
28	ON	ON	OFF	OFF	OFF	ON	ON	ON	92	ON	ON	OFF	OFF	OFF	ON	OFF	ON
29	OFF	ON	OFF	OFF	OFF	ON	ON	ON	93	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
30 31	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	94 95	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON
32	OFF	ON	ON	ON	ON	OFF	ON	ON	95	ON	OPP	ON	ON	ON	OFF	OFF	ON
33	OFF	ON	ON	ON	ON	OFF	ON	ON	97	OFF	ON	ON	ON	ON	OFF	OFF	ON
34	ON	OFF	ON	ON	ON	OFF	ON	ON	98	ON	OFF	ON	ON	ON	OFF	OFF	ON
35 36	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	99 100	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON
37	OFF	ON	OFF	ON	ON	OFF	ON	ON	100	OFF	ON	OFF	ON	ON	OFF	OFF	ON
38	ON	OFF	OFF	ON	ON	OFF	ON	ON	102	ON	OFF	OFF	ON	ON	OFF	OFF	ON
39	OFF	OFF	OFF	ON	ON	OFF	ON	ON	103	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
40	ON OFF	ON ON	ON ON	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	104 105	ON OFF	ON ON	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON
42	ON	OFF	ON	OFF	ON	OFF	ON	ON	105	ON	OFF	ON	OFF	ON	OFF	OFF	ON
43	OFF	OFF	ON	OFF	ON	OFF	ON	ON	107	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
44 45	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	108 109	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON
45	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	1109	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
47	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	111	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
48	ON	ON	ON	ON	OFF	OFF	ON	ON	112	ON	ON	ON	ON	OFF	OFF	OFF	ON
49 50	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	113 114	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON
50	OFF	OFF	ON	ON	OFF	OFF	ON	ON	115	OFF	OFF	ON	ON	OFF	OFF	OFF	ON
52	ON	ON	OFF	ON	OFF	OFF	ON	ON	116	ON	ON	OFF	ON	OFF	OFF	OFF	ON
53	OFF	ON	OFF	ON	OFF	OFF	ON	ON	117	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
54 55	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	118 119	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON
56	ON	ON	ON	OFF	OFF	OFF	ON	ON	120	ON	ON	ON	OFF	OFF	OFF	OFF	ON
57	OFF	ON	ON	OFF	OFF	OFF	ON	ON	121	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
58	ON	OFF	ON	OFF	OFF	OFF	ON	ON	122	ON	OFF	ON	OFF	OFF	OFF	OFF	ON
59 60	OFF ON	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	123 124	OFF ON	OFF ON	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON
61	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	124	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
62	ON	OFF	OFF	OFF	OFF	OFF	ON	ON	125	ON	OFF	OFF	OFF	OFF	OFF	OFF	ON
63	OFF	OFF	OFF	OFF	OFF	OFF	ON	ON	127	OFF	OFF	OFF	OFF	OFF	OFF	OFF	ON

										r							
SS									S								
Ш.	Σ	2	3	4	SW5	SW6	1	SW8	l ŭ	Σ	2	3	4	SW5	SW6		SW8
Ъ	SW1	SW2	SW3	SW4	2	2	SW7	2	L H	SW1	SW2	SW3	SW4	\geq	2	SW7	\geq
ADDRESS		01			01	01			ADDRESS		01				01	01	01
128	ON	ON	ON	ON	ON	ON	ON	OFF	192	ON	ON	ON	ON	ON	ON	OFF	OFF
129 130	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	ON ON	OFF OFF	<u>193</u> 194	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	OFF OFF
130	OFF	OFF	ON	ON	ON	ON	ON	OFF	194	OFF	OFF	ON	ON	ON	ON	OFF	OFF
132	ON	ON	OFF	ON	ON	ON	ON	OFF	195	ON	ON	OFF	ON	ON	ON	OFF	OFF
133	OFF	ON	OFF	ON	ON	ON	ON	OFF	197	OFF	ON	OFF	ON	ON	ON	OFF	OFF
134	ON	OFF	OFF	ON	ON	ON	ON	OFF	198	ON	OFF	OFF	ON	ON	ON	OFF	OFF
135	OFF	OFF	OFF	ON	ON	ON	ON	OFF	199	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
136	ON	ON	ON	OFF	ON	ON	ON	OFF	200	ON	ON	ON	OFF	ON	ON	OFF	OFF
137	OFF	ON	ON	OFF	ON	ON	ON	OFF	201	OFF	ON	ON	OFF	ON	ON	OFF	OFF
138	ON	OFF	ON	OFF	ON	ON	ON	OFF	202	ON	OFF	ON	OFF	ON	ON	OFF	OFF
139	OFF	OFF	ON OFF	OFF OFF	ON	ON ON	ON	OFF OFF	203	OFF	OFF	ON OFF	OFF OFF	ON	ON ON	OFF OFF	OFF OFF
140 141	ON OFF	ON ON	OFF	OFF	ON ON	ON	ON ON	OFF	204 205	ON OFF	ON ON	OFF	OFF	ON ON	ON	OFF	OFF
141	ON	OFF	OFF	OFF	ON	ON	ON	OFF	205	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
143	OFF	OFF	OFF	OFF	ON	ON	ON	OFF	200	OFF	OFF	OFF	OFF	ON	ON	OFF	OFF
144	ON	ON	ON	ON	OFF	ON	ON	OFF	208	ON	ON	ON	ON	OFF	ON	OFF	OFF
145	OFF	ON	ON	ON	OFF	ON	ON	OFF	209	OFF	ON	ON	ON	OFF	ON	OFF	OFF
146	ON	OFF	ON	ON	OFF	ON	ON	OFF	210	ON	OFF	ON	ON	OFF	ON	OFF	OFF
147	OFF	OFF	ON	ON	OFF	ON	ON	OFF	211	OFF	OFF	ON	ON	OFF	ON	OFF	OFF
148	ON	ON	OFF	ON	OFF	ON	ON	OFF	212	ON	ON	OFF	ON	OFF	ON	OFF	OFF
149	OFF	ON OFF	OFF	ON	OFF	ON	ON	OFF	213	OFF	ON OFF	OFF	ON	OFF	ON	OFF OFF	OFF OFF
150 151	ON OFF	OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	OFF OFF	214	ON OFF	OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF	OFF
152	ON	ON	ON	OFF	OFF	ON	ON	OFF	215	ON	ON	ON	OFF	OFF	ON	OFF	OFF
152	OFF	ON	ON	OFF	OFF	ON	ON	OFF	210	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
154	ON	OFF	ON	OFF	OFF	ON	ON	OFF	218	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
155	OFF	OFF	ON	OFF	OFF	ON	ON	OFF	219	OFF	OFF	ON	OFF	OFF	ON	OFF	OFF
156	ON	ON	OFF	OFF	OFF	ON	ON	OFF	220	ON	ON	OFF	OFF	OFF	ON	OFF	OFF
157	OFF	ON	OFF	OFF	OFF	ON	ON	OFF	221	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
158	ON	OFF	OFF	OFF	OFF	ON	ON	OFF	222	ON	OFF	OFF	OFF	OFF	ON	OFF	OFF
159	OFF	OFF	OFF	OFF	OFF	ON	ON	OFF	223	OFF	OFF	OFF	OFF	OFF	ON	OFF	OFF
160	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	ON ON	OFF OFF	224	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF
161 162	OFF	OFF	ON	ON	ON	OFF	ON	OFF	225	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
163	OFF	OFF	ON	ON	ON	OFF	ON	OFF	220	OFF	OFF	ON	ON	ON	OFF	OFF	OFF
164	ON	ON	OFF	ON	ON	OFF	ON	OFF	228	ON	ON	OFF	ON	ON	OFF	OFF	OFF
165	OFF	ON	OFF	ON	ON	OFF	ON	OFF	229	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
166	ON	OFF	OFF	ON	ON	OFF	ON	OFF	230	ON	OFF	OFF	ON	ON	OFF	OFF	OFF
167	OFF	OFF	OFF	ON	ON	OFF	ON	OFF	231	OFF	OFF	OFF	ON	ON	OFF	OFF	OFF
168	ON	ON	ON	OFF	ON	OFF	ON	OFF	232	ON	ON	ON	OFF	ON	OFF	OFF	OFF
169	OFF	ON	ON	OFF	ON	OFF	ON	OFF	233	OFF	ON	ON	OFF	ON	OFF	OFF	OFF OFF
170 171	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	234 235	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF
172	ON	ON	OFF	OFF	ON	OFF	ON	OFF	235	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
172	OFF	ON	OFF	OFF	ON	OFF	ON	OFF	230	OFF	ON	OFF	OFF	ON	OFF	OFF	OFF
174	ON	OFF	OFF	OFF	ON	OFF	ON	OFF	238	ON	OFF	OFF	OFF	ON	OFF	OFF	OFF
175	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF	239	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
176	ON	ON	ON	ON	OFF	OFF	ON	OFF	240	ON	ON	ON	ON	OFF	OFF	OFF	OFF
177	OFF	ON	ON	ON	OFF	OFF	ON	OFF	241	OFF	ON	ON	ON	OFF	OFF	OFF	OFF
178	ON	OFF	ON	ON	OFF	OFF	ON	OFF	242	ON	OFF	ON	ON	OFF	OFF	OFF	OFF
179 180	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	243	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF
180	OFF	ON	OFF	ON	OFF	OFF	ON	OFF	244 245	OFF	ON	OFF	ON	OFF	OFF	OFF	OFF
182	ON	OFF	OFF	ON	OFF	OFF	ON	OFF	245	ON	OFF	OFF	ON	OFF	OFF	OFF	OFF
183	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	240	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
184	ON	ON	ON	OFF	OFF	OFF	ON	OFF	248	ON	ON	ON	OFF	OFF	OFF	OFF	OFF
185	OFF	ON	ON	OFF	OFF	OFF	ON	OFF	249	OFF	ON	ON	OFF	OFF	OFF	OFF	OFF
186	ON	OFF	ON	OFF	OFF	OFF	ON	OFF	250	ON	OFF	ON	OFF	OFF	OFF	OFF	OFF
187	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	251								
188	ON	ON	OFF	OFF	OFF	OFF	ON	OFF	252								
189	OFF	ON OFF	OFF	OFF OFF	OFF OFF	OFF OFF	ON	OFF OFF	253								
190	ON		OFF				ON		254								
191	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	255								

Alternative Soft Addressing Option

Using our hand held MkII programmer (Part No: 48-004), the unit can be addressed electronically.

- Step 1: Set all addresses to zero 0000000
- Step 2: Connect leads to LOOP IN+ and LOOP IN- as shown below

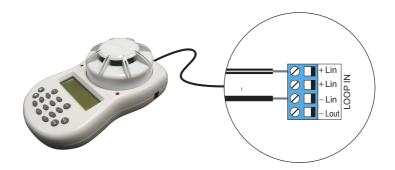


Step 3: Follow the procedure as described in the handheld programmer manual.


NOTE: When a device is soft addressed as above, the address CANNOT BE CHANGED by mechanical setting of the dip-switch. In order to re-enable the dip-switch the unit needs to be set electronically back to zero first.

Isolator Function

The Isolator Function can be enabled or disabled according to the wiring method.

B. Enabling the Isolator Function

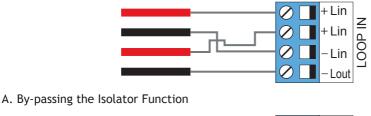

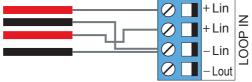

LED Indications

Status	LED Indication
Alarm	Illuminated red when the Sounder Control Module is in alarm
Fault	Illuminated yellow when the Sounder Control Module is in fault
Open	Illuminated yellow when the sounder input is in open state
Short	Illuminated yellow when the sounder input is in short state
Polling	Flashed green when the module is communicating with the panel
Isolating	Illuminated yellow when the loop is short or wrong connection circuit
Ext Power	Illuminated green when Ext Power is connected correctly
Input	Illuminated when no external fault signal present

Functional Test Data

Command Bit	Function	Input Bit	Function
3	Not Used	3	Not Used
2	Not Used	2	Not Used
1	PULSED MODE	1	PULSE MODE CONFIRMED
	1 = Pulsed Mode On		1 = Pulsed Mode On Confirmed
	0 = Pulsed Mode Off		0 = Pulsed Mode Off Confirmed
0	CONTINUOUS MODE	0	CONTINUOUS MODE CONFIRMED
	1 = Continuous Mode On		1 = Continuous Mode On Confirmed
	0 = Continuous Mode Off		0 = Continuous Mode Off Confirmed

Analogue Return Back

Analogue value	08	72
State	Open/short circuit	Normal
LED State		

Troubleshooting

Before investigating individual units for faults, it is very important to check that the system wiring is fault free. Many fault conditions are the result of simple wiring errors. Check all connections to the unit and make sure that the correct value resistors are fitted where necessary.

Faultfinding

Problem	Possible Cause
No response or missing	Incorrect address setting
	Incorrect loop wiring
Fault condition reported	IIncorrect address setting
	Incorrect wiring of sounder zone or fault input
	Faulty sounder
	Local supply faulty or polarity incorrect
	Fuse blown on sounder PCB
Sounders do not operate	Incorrect wiring
	Fuse blown on sounder PCB
	Incorrect cause and effect programming
	Faulty sounder
	Panel Fault
Sounders operate continuously	Incorrect sounder zone wiring
Analogue value unstable	Dual address
	Loop data fault, data corruption

CE
0359
Zeta Alarms Limited,
72-78 Morfa Road, Swansea SA1 2EN
14
GLT-234-DoP-1
EN54-18: 2005
EN54-17: 2005
Fire detection and fire alarm systems - Input/Output Devices
Fire detection and fire alarm systems - Short Circuit Isolators
Zeta Addressable Sounder Control Module with Isolator
ZASC-MI
Intended for use in fire detection and fire alarm systems in and around buildings
Response delay (response time) - PASS Performance under fire conditions - PASS
Operational reliability - PASS Durability of operational reliability: temperature resistance - PASS
Durability of operational reliability; vibration resistance - PASS
Durability of operational reliability; humidity resistance - PASS
Durability of operational reliability; corrosion resistance - PASS
Durability of operational reliability; electrical stability - PASS