

FYREYE MKII ADDRESSABLE ZONE MONITOR MODULE WITH ISOLATOR INSTALLATION GUIDE

General

The Fyreye MkII Addressable Zone Monitor Module is supplied with a backbox for surface mounting.

NOTE: The Zone Monitor Module is designed for indoor use only.

This product is loop powered. A loop load claulation must be performed to determine the permissable quantity of ZAZM-MI per loop.

Model No: ZAZM-MI Fyreye MkII Addressable Zone Monitor Module With Isolator

Surface Mounting


- 1. Mount the backbox as required and install all cables for termination.
- 2. Set the address of the unit as shown on page 3.
- 3. Terminate all cables.
- 4. Gently push the completed assembly towards the back box until the mounting holes are aligned and secure with the two mounting screws provided. DO NOT OVERTIGHTEN.

Isolator Module


The Zone Monitor Module is fitted with a bi-directional short-circuit isolator and will be unaffected by loop short-circuits on either loop input or output.

Wiring Details

All wiring terminals will accept solid or stranded cables up to 2.5mm²

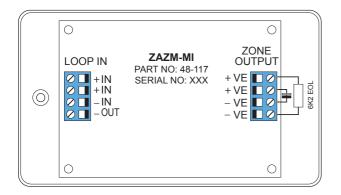

Typical Wiring Diagram

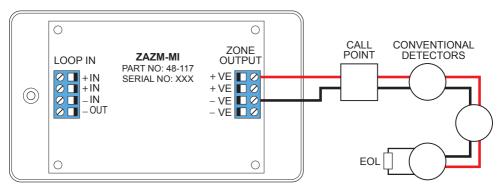

Technical Specification

Model	ZAZM-MI
Part Number	48-117
Operating Voltage	17 - 28V DC
Quiescent Current	3.5mA
Alarm Current (LED OFF)	12.6 mA
Alarm Current (LED ON)	13.2 mA
Isolating Current	7.3mA
End of Line Resistor	6.2k
Nominal Alarm Triggering Resistor	1k
Operating Temperature	"-10C to 55C"
Max Humidity	95% RH Non Condensing
IP Rating	IP21C
Size	150 x 90 x 45 mm
Weight	220g

For information on the short circuit isolator operation see document GLT-224-6-9 available from your distributor.

LED Indications

Status	LED Indication
Alarm	Illuminated red when conventional detector zone is in alarm
Polling	Flashed green when the zone monitor is communicating with panel
Isolating	Illuminated yellow when the loop is short or wrong connection circuit

Address Setting

The address of the Zone Monitor Module is set using the eight segments of the DIL switch. Each segment of the switch must be set to "0"(ON) or "1"(OFF), using a small screwdriver or similar tool. A complete list of address settings is shown overleaf. The maximum address is 250.


SS									SS								
ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8	ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	SW8
0									64	ON	ON	ON	ON	ON	ON	OFF	ON
1	OFF	ON	ON	ON	ON	ON	ON	ON	65	OFF	ON	ON	ON	ON	ON	OFF	ON
2	ON OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	ON ON	ON ON	66 67	ON OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	ON ON
4	ON	ON	OFF	ON	ON	ON	ON	ON	68	ON	ON	OFF	ON	ON	ON	OFF	ON
5	OFF	ON	OFF	ON	ON	ON	ON	ON	69	OFF	ON	OFF	ON	ON	ON	OFF	ON
6	ON OFF	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	ON ON	70 71	ON OFF	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON
8	ON	ON	ON	OFF	ON	ON	ON	ON	72	ON	ON	ON	OFF	ON	ON	OFF	ON
9	OFF	ON	ON	OFF	ON	ON	ON	ON	73	OFF	ON	ON	OFF	ON	ON	OFF	ON
10	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	ON ON	74 75	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	OFF OFF	ON ON
12	ON	ON	OFF	OFF	ON	ON	ON	ON	76	ON	ON	OFF	OFF	ON	ON	OFF	ON
13	OFF	ON	OFF	OFF	ON	ON	ON	ON	77	OFF	ON	OFF	OFF	ON	ON	OFF	ON
14 15	ON OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	ON ON	78 79	ON OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON
16	ON	ON	ON	ON	OFF	ON	ON	ON	80	ON	ON	ON	ON	OFF	ON	OFF	ON
17	OFF	ON	ON	ON	OFF	ON	ON	ON	81	OFF	ON	ON	ON	OFF	ON	OFF	ON
18	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	ON ON	82 83	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	OFF OFF	ON ON
20	ON	ON	OFF	ON	OFF	ON	ON	ON	84	ON	ON	OFF	ON	OFF	ON	OFF	ON
21	OFF	ON	OFF	ON	OFF	ON	ON	ON	85	OFF	ON	OFF	ON	OFF	ON	OFF	ON
22	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	86 87	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON
24	ON	ON	ON	OFF	OFF	ON	ON	ON	88	ON	ON	ON	OFF	OFF	ON	OFF	ON
25	OFF	ON	ON	OFF	OFF	ON	ON	ON	89	OFF	ON	ON	OFF	OFF	ON	OFF	ON
26	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	90 91	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON
28	ON	ON	OFF	OFF	OFF	ON	ON	ON	92	ON	ON	OFF	OFF	OFF	ON	OFF	ON
29	OFF	ON	OFF	OFF	OFF	ON	ON	ON	93	OFF	ON	OFF	OFF	OFF	ON	OFF	ON
30 31	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	94 95	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON
32	ON	ON	ON	ON	ON	OFF	ON	ON	96	ON	ON	ON	ON	ON	OFF	OFF	ON
33	OFF	ON	ON	ON	ON	OFF	ON	ON	97 98	OFF	ON	ON	ON	ON	OFF	OFF	ON
34 35	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON	ON ON	98	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	ON ON
36	ON	ON	OFF	ON	ON	OFF	ON	ON	100	ON	ON	OFF	ON	ON	OFF	OFF	ON
37 38	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	101	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON
30	OFF	OFF	OFF	ON	ON	OFF	ON	ON	102	OFF	OFF	OFF	ON	ON	OFF	OFF	ON
40	ON	ON	ON	OFF	ON	OFF	ON	ON	104	ON	ON	ON	OFF	ON	OFF	OFF	ON
41 42	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	105 106	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON
42	OFF	OFF	ON	OFF	ON	OFF	ON	ON	100	OFF	OFF	ON	OFF	ON	OFF	OFF	ON
44	ON	ON	OFF	OFF	ON	OFF	ON	ON	108	ON	ON	OFF	OFF	ON	OFF	OFF	ON
45 46	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	ON ON	109 110	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON
40	OFF	OFF	OFF	OFF	ON	OFF	ON	ON	111	OFF	OFF	OFF	OFF	ON	OFF	OFF	ON
48	ON	ON	ON	ON	OFF	OFF	ON	ON	112	ON	ON	ON	ON	OFF	OFF	OFF	ON
49 50	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	113 114	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON
50	OFF	OFF	ON	ON	OFF	OFF	ON	ON	114	OFF	OFF	ON	ON	OFF	OFF	OFF	ON ON
52	ON	ON	OFF	ON	OFF	OFF	ON	ON	116	ON	ON	OFF	ON	OFF	OFF	OFF	ON
53	OFF	ON	OFF	ON	OFF	OFF	ON	ON	117	OFF	ON	OFF	ON	OFF	OFF	OFF	ON
54 55	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	118 119	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON
56	ON	ON	ON	OFF	OFF	OFF	ON	ON	120	ON	ON	ON	OFF	OFF	OFF	OFF	ON
57	OFF	ON	ON	OFF	OFF	OFF	ON	ON	121	OFF	ON	ON	OFF	OFF	OFF	OFF	ON
58 59	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	122 123	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON
60	ON	ON	OFF	OFF	OFF	OFF	ON	ON	124	ON	ON	OFF	OFF	OFF	OFF	OFF	ON
61	OFF	ON	OFF	OFF	OFF	OFF	ON	ON	125	OFF	ON	OFF	OFF	OFF	OFF	OFF	ON
62 63	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	ON ON	126 127	ON OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON
03									12/		OFF						

RESS	Ч	/2	/3	/4	/5	/6	17	SW8]	RESS	Ч	12	/3	4	/5	SW6	17	/8
ADDRESS	SW1	SW2	SW3	SW4	SW5	SW6	SW7	S		ADDRESS	SW1	SW2	SW3	SW4	SW5	SV	SW7	SW8
128	ON	ON	ON	ON	ON	ON	ON	OFF		192	ON	ON	ON	ON	ON	ON	OFF	OFF
129 130	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	ON ON	OFF OFF		193 194	OFF ON	ON OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF	OFF OFF
131	OFF	OFF	ON	ON	ON	ON	ON	OFF		195	OFF	OFF	ON	ON	ON	ON	OFF	OFF
132 133	ON OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	ON ON	OFF OFF		196 197	ON OFF	ON ON	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF
133	ON	OFF	OFF	ON	ON	ON	ON	OFF		197	ON	OFF	OFF	ON	ON	ON	OFF	OFF
135	OFF	OFF	OFF	ON	ON	ON	ON	OFF		199	OFF	OFF	OFF	ON	ON	ON	OFF	OFF
136 137	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	ON ON	OFF OFF		200	ON OFF	ON ON	ON ON	OFF OFF	ON ON	ON ON	OFF OFF	OFF OFF
137	ON	OFF	ON	OFF	ON	ON	ON	OFF		201	ON	OFF	ON	OFF	ON	ON	OFF	OFF
139	OFF	OFF	ON	OFF	ON	ON	ON	OFF		203	OFF	OFF	ON	OFF	ON	ON	OFF	OFF
140	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF		204 205	ON OFF	ON ON	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF	OFF OFF
142	ON	OFF	OFF	OFF	ON	ON	ON	OFF		206	ON	OFF	OFF	OFF	ON	ON	OFF	OFF
143 144	OFF ON	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	ON ON	OFF OFF		207	OFF ON	OFF ON	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	OFF OFF
144	OFF	ON	ON	ON	OFF	ON	ON	OFF		208	OFF	ON	ON	ON	OFF	ON	OFF	OFF
146	ON	OFF	ON	ON	OFF	ON	ON	OFF		210	ON	OFF	ON	ON	OFF	ON	OFF	OFF
147 148	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	ON ON	OFF OFF		211 212	OFF ON	OFF ON	ON OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF
140	OFF	ON	OFF	ON	OFF	ON	ON	OFF		212	OFF	ON	OFF	ON	OFF	ON	OFF	OFF
150	ON	OFF	OFF	ON	OFF	ON	ON	OFF		214	ON	OFF	OFF	ON	OFF	ON	OFF	OFF
151 152	OFF ON	OFF ON	OFF ON	ON OFF	OFF OFF	ON ON	ON ON	OFF OFF		215 216	OFF ON	OFF ON	OFF ON	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF
152	OFF	ON	ON	OFF	OFF	ON	ON	OFF		217	OFF	ON	ON	OFF	OFF	ON	OFF	OFF
154	ON	OFF	ON	OFF	OFF	ON	ON	OFF		218	ON	OFF	ON	OFF	OFF	ON	OFF	OFF
155 156	OFF ON	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF		219	OFF ON	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF
157	OFF	ON	OFF	OFF	OFF	ON	ON	OFF		221	OFF	ON	OFF	OFF	OFF	ON	OFF	OFF
158 159	ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON	ON	OFF OFF		222	ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON	OFF OFF	OFF OFF
160	OFF ON	OFF	OFF	OFF	OFF	ON OFF	ON ON	OFF		223	OFF ON	OFF	OFF	OFF	OFF	ON OFF	OFF	OFF
161	OFF	ON	ON	ON	ON	OFF	ON	OFF		225	OFF	ON	ON	ON	ON	OFF	OFF	OFF
162 163	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	ON ON	OFF OFF		226	ON OFF	OFF OFF	ON ON	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF
164	ON	ON	OFF	ON	ON	OFF	ON	OFF		228	ON	ON	OFF	ON	ON	OFF	OFF	OFF
165	OFF	ON	OFF	ON	ON	OFF	ON	OFF		229	OFF	ON	OFF	ON	ON	OFF	OFF	OFF
166 167	ON OFF	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF	ON ON	OFF OFF		230 231	ON OFF	OFF OFF	OFF OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF
168	ON	ON	ON	OFF	ON	OFF	ON	OFF		232	ON	ON	ON	OFF	ON	OFF	OFF	OFF
169	OFF	ON	ON	OFF	ON	OFF	ON	OFF		233	OFF	ON	ON	OFF	ON	OFF	OFF	OFF
170	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF		234 235	ON OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF
172	ON	ON	OFF	OFF	ON	OFF	ON	OFF		236	ON	ON	OFF	OFF	ON	OFF	OFF	OFF
173 174	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	ON ON	OFF OFF		237 238	OFF ON	ON OFF	OFF OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF
174	OFF	OFF	OFF	OFF	ON	OFF	ON	OFF		230	OFF	OFF	OFF	OFF	ON	OFF	OFF	OFF
176	ON	ON	ON	ON	OFF	OFF	ON	OFF		240	ON	ON	ON	ON	OFF	OFF	OFF	OFF
177 178	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF		241 242	OFF ON	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF
179	OFF	OFF	ON	ON	OFF	OFF	ON	OFF		243	OFF	OFF	ON	ON	OFF	OFF	OFF	OFF
180	ON	ON	OFF	ON	OFF	OFF	ON	OFF		244	ON	ON	OFF	ON	OFF	OFF	OFF	OFF
181 182	OFF ON	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	ON ON	OFF OFF	1	245 246	OFF ON	ON OFF	OFF OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF
183	OFF	OFF	OFF	ON	OFF	OFF	ON	OFF	1	247	OFF	OFF	OFF	ON	OFF	OFF	OFF	OFF
184 185	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF		248 249	ON OFF	ON ON	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	OFF OFF
185	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF		249	OFF	OFF	ON	OFF	OFF	OFF	OFF	OFF
187	OFF	OFF	ON	OFF	OFF	OFF	ON	OFF	1	251								
188 189	ON OFF	ON ON	OFF OFF	OFF OFF	OFF OFF	OFF OFF	ON ON	OFF OFF		252 253								$\left - \right $
189	ON	OFF	OFF	OFF	OFF	OFF	ON	OFF	1	253								
191	OFF	OFF	OFF	OFF	OFF	OFF	ON	OFF	1	255								

Alternative Soft Addressing Option

Using our hand held MkII programmer (Part No: 48-004), the unit can be addressed electronically.

- Step 1: Set all addresses to zero 0000000
- Step 2: Connect leads to LOOP IN+ and LOOP IN- as shown below

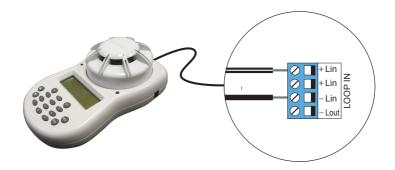


Step 3: Follow the procedure as described in the handheld programmer manual.


NOTE: When a device is soft addressed as above, the address CANNOT BE CHANGED by mechanical setting of the dip-switch. In order to re-enable the dip-switch the unit needs to be set electronically back to zero first.

Isolator Function

The Isolator Function can be enabled or disabled according to the wiring method.

B. Enabling the Isolator Function

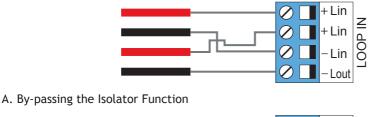

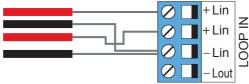

Command Bit	Function	Input Bit	Function
3	SELF TEST	3	SELF TEST
	0 = Normal		0 = Normal
	1 = Test active		1 = Test active
2	ENABLE ALARM LED	2	ENABLE ALARM LED CONFIRMED
	0 = Normal		0 = Normal
	1 = Illuminated alarm led		1 = Illuminated alarm LED
1	INCREASE MODE	1	INCREASE MODE CONFIRMED
	0 = Increase mode disable		0 = Increase mode disable confirmed
	1 = Increase mode enable		1 = Increase mode enable confirmed
0	RESET	0	RESET
	0 = Normal		0 = Normal
	1 = Reset on		1 = Reset on

Functional Test Data

Input Condition and Status

Status	Safe Area Circuit	Analogue	LED State
Short-circuit fault	<150Ω	8	-
Indeterminate	150Ω-200Ω	8 or 192	-/Alarm
Alarm	200Ω-2.6kΩ	192	Alarm
Indeterminate	2.6kΩ-3.5kΩ	192 or 72	Alarm /-
Normal	3.5kΩ-6.8kΩ	72	-
Indeterminate	6.8kΩ-15kΩ	8 or 72	-
Open-circuit fault	>15kΩ	8	-

Analogue Return Back

Analogue value	08	72	192
State	Open/short circuit	Normal	Alarm/Self-test
LED State			Alarm LED

Troubleshooting

Before investigating individual units for faults, it is very important to check that the system wiring is fault free. Many fault conditions are the result of simple wiring errors. Check all connections to the unit and make sure that the correct value resistors are fitted where necessary.

Faultfinding

Problem	Possible Cause
No response or missing	Incorrect address setting
	Incorrect loop wiring
Fault condition reported	Incorrect input wiring
	Capacitor not fitted with active EOL
	Detector removed
	Incorrect EOL
	Incorrectly fitted active EOL
Analogue value unstable	Dual address
	Loop data fault, data corruption
Constant Alarm	Incorrect wiring
	Incorrect end-of-line resistor fitted
	Incompatible control panel software

CE	
0359	
Zeta Alarms Limited, 72-78 Morfa Road, Swansea SA1 2EN	
14	
GLT-235-DoP-1	
EN54-18: 2005 EN54-17: 2005	
Fire detection and fire alarm systems - Input/Output Devices Fire detection and fire alarm systems - Short Circuit Isolators	
Zeta Addressable Zone Monitor Module with Isolator ZAZM-MI	
Intended for use in fire detection and fire alarm systems in and around build	lings
Response delay (response time) - PASS	
Performance under fire conditions - PASS	
Operational reliability - PASS	
Durability of operational reliability: temperature resistance - PASS	
Durability of operational reliability; vibration resistance - PASS Durability of operational reliability; humidity resistance - PASS	
Durability of operational reliability; corrosion resistance - PASS	
Durability of operational reliability; electrical stability - PASS	